

Installation flow

1.Pull the motherboard by hand




2.The position of motherboard's buckle



3.Pull the meter decorative board by hand



4.The buckle of decorative board

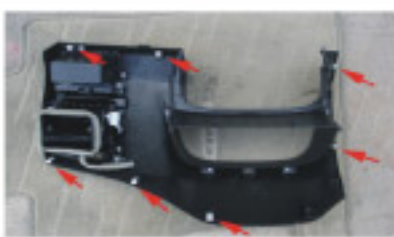

5.Photo effect after taking out motherboard and meter decorative board



6.Take out the cover board by hand



7.The position of cover board's buckle



8.After removing the cover board, you can see 2 pieces of screw which fixed original car unit



9.Take out 2 pieces of screw which fixed original car unit



10.Loosen the buckle of original car unit and take out the original unit



11.Photo effect after taking out the original unit




12.Take out the air-condition adjustment knob by screwdriver



13.Photo effect after taking out the knob



14.Back sight of the unit

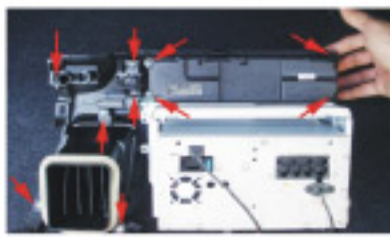

15.Take out the buttons of air condition and install to K319



Installation flow

16.Take out the danger indicator light of original unit and install to K319



17.Take out the temperature controller of original unit and install to K319



18.Take out the air condition of original unit and install to K319



19.Install the buckle of original unit (The orientation of buckle should according to arrowhead on the unit)



20.According to the requirement, connect all cables (If it is built-in NAW, it should be connect the NAW antenna to the unit) A: The TV box's plug



B: The plug of steering wheel control cable



C: Rearview sensor port



D: CDC plug



E: AV output plug



F: 5.1 CH output port



G: Photo effect of connecting all cables if needs



21.Connect the loudspeaker power cable



22. Photo effect after installing K319

